



## UNIQTUNE WIRELESS SPEAKER USER GUIDE



For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are not responsible for consequences caused by faulty use or oversight of this manual.

### FEATURES


1. Outdoor HIFI Bluetooth Speaker;
2. Output very clear sound and heavy bass, dynamic sound effect;
3. With A2DP Bluetooth, wireless stream music from any Bluetooth-eabled device such as your mobile phone, notebook, iPhone or iPad;
4. Secure simple pairing for user-friendly operation;
5. 10 meters operating range;
6. With USB and SD card supporting;
7. With FM radio;
8. With 2 Microphone input;
9. With Line-in function, suitable for PC, MID, TV and other audio devices;
10. Side panel control for volume;
11. With Led display, can show the digital number & working status;
12. Built-in lithium rechargeable battery 1800mAh;

### SPECIFICATION

Product size:	404(L) * 214(W) * 252(H) mm
Horn Size:	2 inch
Horn output:	1.5W, 4Ω
Subwoofer Size:	6 inch
Subwoofer output:	10W,4Ω
Battery Capacity:	1800mAh
Frequency Response:	100Hz-16KHz
Power supply:	DC5V
USB/SD supporting:	MAXIMUM 32GB

## CONTROL PANEL

1. Mic input 1
2. Mic input 2
3. SD slot
4. Previous
5. Mode
6. Next
7. On/Off button
8. Volume knob
9. USB port
10. Aux-in jack
11. Play/Pause
12. Charging jack
13. MIC Echo
14. Mic Volumenual.

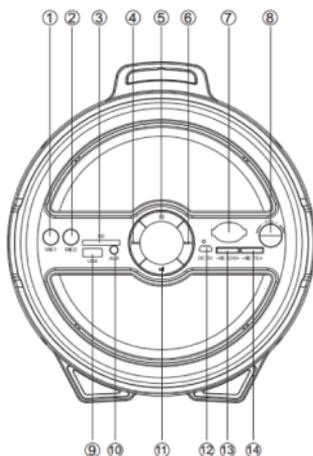

## PLAYING MUSIC

1. Turn the Power button to "ON"
2. Insert SD/MMC card or USB flash disk into slot, audio files play automatically.
3. Under playing mode, short PREV or NEXT to select songs you like, long press to fast forward or backward the song.
4. Spin VOL knob to adjust the volume up or down.
5. Press PLAY/PAUSE to play or pause.
6. For other compatible music devices or your MP3/MP4 players, use the supplied audio cable to connect from the device's "Line Out" to the "Aux-IN" of this device. When using an external device, all functions will be controlled by the external device.
7. Please turn the Power button to "OFF" while not using.

## BLUETOOTH FUNCTION

1. Turn the power button to "ON", The LED screen will display bt and beep twice, twinkling quickly.

2. Activate Bluetooth of mobile phone and search for device name "UNIQTune " then connect it. The bt on the screen stop twinkling and beep three times once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Press PREV or NEXT button on the device or on Mobile phones to select songs you like.
5. Press Play/pause button on the device or on Mobile phones to play/pause the music
6. Use the Volume knob to adjust volume up and down. Or adjust the mobile phones' volume.

### **FM RADIO**

1. Under FM radio state, the audio cable provided treat as antenna. Please Insert the audio cable to get the best FM signal before using.
2. Turn the power button to "ON", press the "MODE" button to switch to FM radio state.
3. Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.
4. Press PREV or NEXT button to change the stored FM channel.

### **AUX-IN**

For other compatible music devices or your MP3/MP4 players, use the supplied audio cable to connect from the device's "Line Out" to the "Aux In" of this device. Then press the "MODE" button to switch to AUX-IN state. Enjoy...

When using an external device, all functions can be controlled by the external devise...

### **MICROPHONE:**

This product has two Microphone inputs. just plug the 6.5MM microphone into the Mic hole then you can use it.

The volume and Echo can be adjusted by the knobs of "MIC-Vol" & "MIC-Echo"..



## CHARGING

1. The charger is not included in the accessories. Please use a DC adapter (5V/1A) to charge this speaker through a supplied charging cable.
2. The red indicator will be lighted when charging is begin and the indicator light will turn off when the speaker is fully charged. Charge time should be 4-6 hours.
3. When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may can not afford the high current temporarily under the maximum volume
4. In order to prolong the life of battery, please do not charge more than 8 hours.

## ACCESSORIES

Charge cable, audio cable, user manual

## DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

This symbol on the product or packaging means that the product should not be treated as household waste. Do not throw to garbage at the end of its life, but take it to a collection center for recycling.

Model: UNIQTune  
EAN: 8719273149935

Email: info@uniqaccessory.com  
Web: uniqaccessory.com  
Address: Innsbruckweg 46, 3047AH Rotterdam

----- WARRANTY FORM -----

Your full name: .....

Reason: .....

Product EAN: .....

Model: .....

Purchase Date: .....

MADE IN CHINA

