

# UNIQIBIZA Wireless Speaker USER GUIDE



For correctly operating, please read this User Guide carefully before using. Any content revise of the manual won't declare again and we are not responsible for consequences caused by fault or oversight of this manual.

# **FEATURES**

- 1. Outdoor passive Wireless Speaker;
- 2. Output very clear sound and heavy bass, dynamic sound effect;
- Features A2DP Bluetooth: wireless stream music from any Bluetoothenabled device;
- 4. Secure simple pairing for user-friendly operation;
- 5. 10 meters operating range;
- 6. USB input;
- 7. FM radio:
- 8. With Line-in function, suitable for PC,MID,TV and other audio devices;
- TWS function, one mobile phone can connect with two speakers at the same time:
- 10. Built-in lithium rechargeable battery 1500mAh;

# SPECIFICATION

 Subwoofer Size:
 2 inch

 Subwoofer output:
 7.5W\*4Ω

 
 Battery Capacity:
 1500mAh

 Frequency Response:
 100-20Khz

 Power supply:
 DCSV

Power supply: DC5V

USB/SD support: MAXIMUM 32GB



# CONTROL PANEL

- Play/Pause/TWS (Long press)
- 2. Mode (Switch Wireless, USB disk,FM and AUX-IN state)
- 3. Backward (short press)/ volume up( Long press)
- 4. Forward(short press)/ volume down( Long press)
- 5. USB port
- 6. On/Off button
- 7. Charging jack
- 8. Aux-in jack

#### PLAYING MUSIC

- 1. Turn the Power button to "ON"
- Insert USB flash disk into slot, audio files play automatically.
- Under playing mode, short + or to select songs you like, long press to fast forward or backward the song.
- 4. Press PLAY/PAUSE to play or pause.
- For other compatible music devices or your MP3/MP4 players, use
  the supplied audio cable to connect from the device's "Line Out"
  to the "Aux-IN" of this device. When using an external device, all
  functions will be controlled by the external device.

### BLUETOOTH FUNCTION

- Turn the power button to "ON", The LED screen will display bt and beep twice, twinkling quickly.
- Activate Bluetooth of mobile phone and search for device name "UNIQibiza" then connect it. The bt on the screen stops twinkling and beep three times once connected successful.
- Play the music from your mobile phone and enjoy.



- Press + or button on the devices or on Mobile phones to select songs you like.
- Press Play/pause button on the devices or on Mobile phones to play/ stop the music
- Use the + or to adjust volume up and down. Or adjust the mobile phones' volume.

# **FM RADIO**

- Under FM radio state, the audio cable provided treat as antenna.
   Please insert the audio cable to get best FM signal before using.
- Turn the power button to "ON" without USB Stick inserted. Then
  press the "MODE" button to switch to FM.(The order of the mode is
  Bluetooth, USB, FM and AUX-IN)
- Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.
- 4. Press + or button to change the stored FM channel.

# **AUX-IN**

For other compatible music devices or your MP3/MP4 player, use the supplied audio cable to connect from the device's "Line Out" to the "Aux In" of this device. Then press the "MODE" button to switch to AUX-IN state. Enjoy...

When using an external device, all functions will be controlled by the external device except the volume adjusting.

#### TWS FUNCTION

- Power off the unit, put the provided charging cable into the charge slot, connect the other end to PC or other charger with 5V output (Not included), the red charging indicator keeps lighting.
- Charge time should be between 3-5 hours. When charging full, the indicator light will switch off.
- In order to prolong the life of battery, please do not charge more than 8 hours.



#### TWS FUNCTION

- Turn on the two identical speakers you want to be paired, please note that they must have the same BT pairing name, both under BT mode. You only need to set up one of the two units;
- Long press the "PALY /PAUSE" button for around 4 seconds once ,one time "di" voice comes out, then these two speakers are connected.
- Then connect the BT pairing name of the two machines which already BU paired, then music plays, one is in left channel while the other in right channel.

# **ACCESSORIES**

Adapter, charging cable, audio cable, USER GUIDE

For more information about UNIQIbiza (EAN: 8719273157008), please contact UNIQ Accessory using the following contact information:

Model: UNIQibiza
EAN: 8719273157008
Email: info@uniqaccessory.com
Web: uniqaccessory.com

Address: Innsbruckweg 46, 3047AH Rotterdam, The Netherlands

WARRANTY FORM	
Your full name:	
Reason:	
Product EAN:	
Model:	
Purchase Date:	

