



UNIQFUNKY WIRELESS SPEAKER USER GUIDE


For correctly operating, please read this User Guide carefully before using. Any content revise of the manual won't declare again and we are not responsible for consequences caused by fault or oversight of this manual.

FEATURES

1. 2.0CH charming Boombbox of RGB Lighting;
2. Output very clear sound and dynamic sound effect;
3. Wireless version 5.0 , wireless stream music from any Wireless-enabled device such as your mobile phone ;
4. Secure simple pairing for user-friendly operating;
5. 10 meters operating range(without obstacles);
6. With USB and TF card supporting;
7. With FM radio;
8. With Line-in function(AUX-IN),suitable for PC,MID,TV and other audio device;
9. With TWS function,1 Wireless connection to 2 same speakers at the same time, enjoy the stereo effect;
10. Built-in lithium rechargeable battery 3000mAh;
11. With handle, easy to take out.

SPECIFICATION

Product size:	341 (L) *125(W) * 164 (H) mm
Wireless version:	5.0; Support A2DP and AVRCP profile
Wireless range:	up to 10 meters(without obstacles)
Speaker:	Tweeter size: 2.75"*2; Tweeter output: 8.5W*2, 4Ω
Connections:	USB and Aux-in 3.5mm jack connection
Power supply:	Built-in rechargeable lithium battery 3000mAh (2 hours playtime with max volume and RGB Light)
Recharge power:	DC 5V 1A (USB-to-micro USB charging cable included)
Frequency Response:	80Hz-12KHz

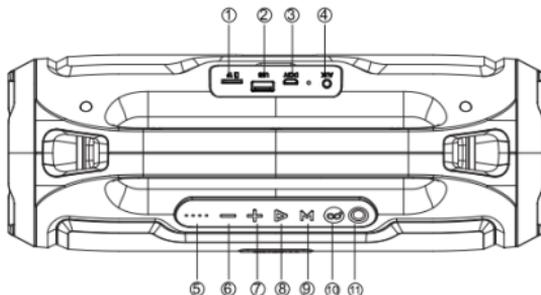

CONTROL PANEL

1. TF card slot
2. USB Port
3. Charging Port
4. AUX-in Jack
5. Battery Indicator
6. Forward(Short press)/ Volume down(Long press)
7. Backward(Short press)/ Volume up(Long press)
8. Play/Pause
9. Mode (Switch Wireless, USB, TF card, FM radio and AUX-IN state)
10. TWS Button(Long press)
11. Power button

BLUETOOTH FUNCTION

1. Short press "Power button" to open the power supply to open the power supply, The Power button turn blue and twinkle quickly, then enter Wireless mode and make a tone "Wireless Device Ready To Pair".
2. Activate Wireless of mobile phone and search for device name "UNI-QFunky" then connect it. The power button stop twinkling and make a tone "Wireless Device Connected Successfully once connected."
3. Play the music from your mobile phone and enjoy.
4. Short Press "Forward" or "Backward" button on the device or on Mobile phones to select songs you like.
5. Short Press "Play/Pause" button on the device or on Mobile phones to Play/ Pause the music.
6. Long press "Forward" or "Backward" button to adjust volume up and down. Or adjust the mobile phones' volume.
7. Long press "Play/Pause" button to activate Mobile phone voice control function SIRI/GOOGLE ASSISTANT;

FM RADIO

1. Under FM radio state, the audio cable provided treat as antenna. Please Insert the Audio Cable to get best FM signal before using.
2. Short press “Power” butto to open the power supply, press the “M” button, the speaker will prompt “The Radio Mode” when entering FM state.
3. Under playing mode, short press “Play/Pause” button to auto search the FM Channel and store it automatically.
4. Press “Forward”or “Backward” button to change the stored FM channel.

AUX-IN

1. For other compatible music devices or your MP3/MP4 players, use the supplied Audio cable to connect from the device’s “Line Out” to the “Aux In” of this device. Then press the “M” button, the speaker will prompt “Aux Input Mode”, then Enjoy...
2. When using an external device, all functions can be controlled by the external device.

TWS FUNCTION

1. Turn on two identical speakers you want to pair, please noted they must be the same BT paring name, both under BT mode. Only need to set one of the two units;
2. Press the “TWS” button, speaker will make a tone “di” to start to pair, it will make “di” 3 times and TWS button will keep lighting after paired successfully;
3. Make Wireless connection with your mobile phone to play music by the two paired Speakers to create more powerful surround sound effect.
4. When you want to exit the TWS mode, press “TWS” button (of the unit you set at beginning) again to exit the TWS function.

PLAYING MUSIC FROM USB DISK & TF CARD

1. Short press “Power button”to open the power supply.
2. Insert TF card or USB flash disk into slot, the speaker will make a tone “Music Play Mode”, and play the stored music automatically.
3. Under playing mode, short press “Forward”or “Backward” button to select songs you like, long press to adjust the volume up and down.
4. Short Press “Play/Pause” to play or pause.

Remark: Under Wireless playing mode, insert TF card or USB will disconnect the Wireless and switch to play the USB or TF card. You can press the MODE button to switch to Wireless mode again.

REMARKS

1. When Wireless connection with iPhone mobile, there will be a battery icon indicating the speaker battery volume on your iPhone.
2. Short Press the “M” button to switch the different modes, the order is Wireless, USB disk, SD card, FM radio and AUX-IN.
3. When the speaker Wireless connected with one mobile device, user can long press the TWS button to disconnect the previous device, then make Wireless connection with another mobile device;

4. Default volume is at 50% Speaker of max volume;
5. Long press “M” button to turn the RGB on/off;
6. When battery voltage low, the speaker will prompt “Battery Is Low, Please Recharge In Time”;
7. Long press “Power button” to turn off the power, while without use.

HOW TO CHARGE

1. The charger is not included in the accessories. Please use the Universal 5V/1A charger to charge this device, and we are not responsible for any damage caused by using other charger.
2. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with 5V output.
3. Charge time should about 4.5 hours. The light is red while charging, and the indicator light will switch off when full charged. (When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not be able to afford the high current temporarily under the maximum volume.)
4. In order to prolong the life of battery, please do not charge more than 8 hours.

ACCESSORIES

Adapter, charging cable, audio cable, USER GUIDE

For more information about UNIQberlin (EAN: 8719273158005), please contact UNI-Q Accessory using the following contact information:

Model: UNIQfunky
 EAN: 8719273158005
 Email: info@uniqaccessory.com
 Web: uniqaccessory.com
 Address: Innsbruckweg 46, 3047AH Rotterdam, The Netherlands

----- WARRANTY FORM -----

Your full name:
 Reason:
 Product EAN:
 Model:
 Purchase Date:

MADE IN CHINA

