



# UNIQ KARAOKE WIRELESS SPEAKER USER GUIDE

For correctly operating, please read this User Guide carefully before using. Any content revise of the manual won't declare again and we are not responsible for consequences caused by fault or oversight of this manual.

## FEATURES

1. 2.1 channel portable Bluetooth Speaker with 6 inch subwoofer;
2. Output very clear sound and heavy bass, dynamic sound effect;
3. Features A2DP Bluetooth: wirelessly stream music from any Bluetooth-enabled device;
4. Secure simple pairing for user-friendly operation;
5. 10 meters operating range;
6. USB and SD card inputs;
7. FM radio;
8. Microphone input;
9. With Line-in function, suitable for PC, MID, TV and other audio devices;
10. Side panel control for volume and bass;
11. Built-in lithium rechargeable battery 4000mAh;


## SPECIFICATION

Product size:	Ø 225*310(L) mm
Horn Size:	3 inch
Subwoofer Size:	6 inch
Horn output:	3W*2,4Ω
Subwoofer output:	15W, 4Ω
Battery Capacity:	4000mAh
Frequency Response:	100-20Khz
Power supply:	DC5V
USB/SD supporting:	MAXIMUM 32GB

## CONTROL PANEL



1. Charging jack
2. Backward
3. Forward
4. Play/Pause
5. Mode  
(Switch Bluetooth, USB disk, SD, FM and AUX-IN)
6. LED display
7. SD slot
8. Bass knob
9. Volume knob
10. On/Off button
11. Mic input 1
12. USB port
13. Mic input 2
14. Aux-in jack
15. Mic Echo knob
16. Mic volume knob

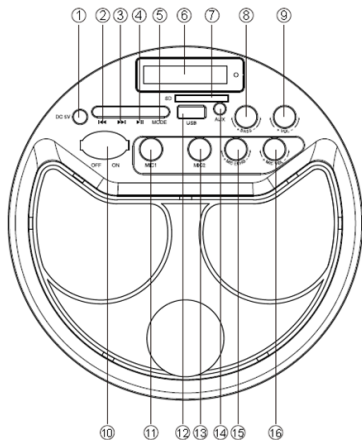

## PLAYING MUSIC

1. Turn the Power button to "ON"
2. Insert SD/MMC card or USB flash disk into slot, audio files play automatically.
3. Under playing mode, short PREV or NEXT to select songs you like, long press to fast forward or backward the song.
4. Spin VOL knob to adjust the volume up or down. Spin Bass-vol knob to adjust the bass volume
5. Press PLAY/PAUSE to play or pause.
6. For other compatible music devices or your MP3/MP4 players, use the supplied audio cable to connect from the device's "Line Out" to the "Aux In" of this devices. When using an external device, all functions will be controlled by the external device.
7. Please turn the Power button to "OFF" while without use.

## BLUETOOTH FUNCTION

1. Turn the power button to "ON", The LED screen will display bt and beep twice, twinkling quickly.
2. Activate Bluetooth of mobile phone and search for device name "UNI-QKaraoke" then connect it. The bt on the screen stop twinkling and beep three times once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Press PREV or NEXT button on the devices or on Mobile phones to select songs you like.
5. Press Play/pause button on the devices or on Mobile phones to play/stop the music
6. Use the "Volume "to adjust volume up and down. Or adjust the mobile phones' volume.
7. Use the "Bass knob" to adjust bass.

## FM RADIO

1. Under FM radio state, the audio cable provided treat as antennal. Please insert the audio cable to get best FM signal before using.
2. Turn the power button to "ON" without SD or USB Card inserted. Then press the "MODE" button to switch to FM.(The order of the mode is Bluetooth, SD, USB, FM and AUX-IN)
3. Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.
4. Press LAST or NEXT button to change the stored FM channel.

## AUX-IN

For other compatible music devices or your MP3/MP4 players, use the supplied audio cable to connect from the device's "Line Out" to the "Aux In" of this device. Then press the "MODE" button to switch to AUX-IN mode. When using an external device, all functions will be controlled by the external device, except the volume adjusting.

## MICROPHONE

This product has two microphone inputs. Just plug the 6.5MM microphone into the Mic hole and you can directly use it.

The volume and Echo can be adjusted by the knobs of "MIC-Vol" & "MIC-ECHO"

(Please note that microphone cannot be used under FM radio mode)

## CHARGING

1. The charger is not included in the accessories. Please use the universal 5V/1A charger to charge this device. Put the provided charging cable into the charging jack, connect the other end to the charger, the charging indicator beside the LED screen will keep lighting.
2. When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may not afford the high current temporarily under the maximum volume.
3. Charge time should be 4-6 hours. When charging full, the indicator light will switch off.
4. To prolong the life of battery, DO NOT CHARGE CONTINUOUSLY FOR LONGER THAN 8 HOURS.

## ACCESSORIES

Charging cable, Audio Cable, 1 Microphone, USER GUIDE

For more information about UNIiQKaraoke (EAN: 8719273225271), please contact UNIiQ Accessory using the following contact information:

Model: UNIiQKaraoke  
EAN: 8719273225271  
Tel: 0031 10 229 89 03  
Email: info@uniqaccessory.com  
Web: uniqaccessory.com  
Address: Innsbruckweg 46, 3047AH Rotterdam, The Netherlands

----- WARRANTY FORM -----

Your full name: .....  
Reason: .....  
Product EAN: .....  
Model: .....  
Purchase Date: .....

MADE IN CHINA

