



UNIQMINI WIRELESS SPEAKER USER GUIDE



For correctly operating, please read this User Guide carefully before using. Any content revise of the manual won't declare again and we are not responsible for consequences caused by fault or oversight of this manual.

FEATURES


1. Outdoor passive HIFI Wireless Speaker;
2. Output very clear sound and heavy bass, dynamic sound effect;
3. Features A2DP Bluetooth: wireless stream music from any Bluetooth-enabled device;
4. Secure simple pairing for user-friendly operation;
5. 10 meters operating range;
6. USB input;
7. FM radio;
8. With Line-in function, suitable for PC,MID,TV and other audio devices;
9. Side panel control for volume;
10. Built-in lithium rechargeable battery 2200mAh;

SPECIFICATION

| | |
|---------------------|-------------------|
| Product size: | Φ 96 * 226 (L) mm |
| Horn Size: | 2.5 inch |
| Horn output: | 6W*4Ω |
| Battery Capacity: | 2200mAh |
| Frequency Response: | 100-20Khz |
| Power supply: | DC5V |
| USB/SD support: | MAXIMUM 32GB |

CONTROL PANEL

1. ON/OFF Button
2. USB port
3. Aux-in jack
4. Charging jack
5. Mode (Switch Wireless, USB disk FM and AUX-IN state)
6. Backward/Volume down
7. Forward/Volume up
8. Play/Pause

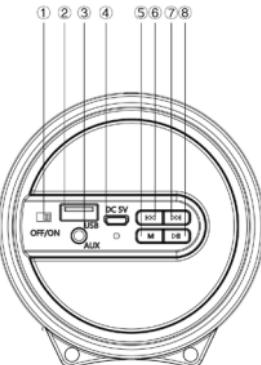

PLAYING MUSIC

1. Turn the Power button to “ON”
2. Insert USB flash disk into slot, audio files play automatically.
3. Under playing mode, short PREV or NEXT to select songs you like, long press to fast forward or backward the song.
4. Spin VOL knob to adjust the volume up or down.
5. Press PLAY/PAUSE to play or pause.
6. For other compatible music devices or your MP3/MP4 players, use the supplied audio cable to connect from the device’s “Line Out” to the “Aux-IN” of this device. When using an external device, all functions will be controlled by the external device.
7. Please turn the Power button to “OFF” while not using.

BLUETOOTH FUNCTION

1. Turn the power button to “ON”, The LED screen will display bt and beep twice, twinkling quickly.
2. Activate Bluetooth of mobile phone and search for device name “UNIQMini” then connect it. The bt on the screen stops twinkling and



- beep three times once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Press PREV or NEXT button on the devices or on Mobile phones to select songs you like.
5. Press Play/pause button on the devices or on Mobile phones to play/stop the music
6. Use the “Volume “to adjust volume up and down. Or adjust the mobile phones’ volume.

FM RADIO

1. Under FM radio state, the audio cable provided treat as antenna. Please insert the audio cable to get best FM signal before using.
2. Turn the power button to “ON” without USB Stick inserted. Then press the “MODE” button to switch to FM.(The order of the mode is Bluetooth, USB, FM and AUX-IN)
3. Under playing mode, short press “Play/pause” button to auto search the FM Channel and store it automatically.
4. Press LAST or NEXT button to change the stored FM channel.

AUX-IN

For other compatible music devices or your MP3/MP4 player, use the supplied audio cable to connect from the device’s “Line Out” to the “Aux In” of this device. Then press the “MODE” button to switch to AUX-IN state. Enjoy...

When using an external device, all functions will be controlled by the external device except the volume adjusting.

CHARGING



1. Put the provided charge cable into the charging jack, connect the other end to the provided adapter, the charging indicator beside the LED screen will keep lighting.
2. (When playing music during charging, please put the volume to middle, because for some music with heavy bass, the adapter may not afford the high current temporarily under the maximum volume)
3. Charge time should be 4-6 hours. When charging full, the indicator light will switch off.
4. To prolong the life of battery, DO NOT CHARGE CONTINUOUSLY FOR LONGER THAN 8 HOURS.

ACCESSORIES

Adapter, charging cable, audio cable, USER GUIDE

For more information about UNIQMini (EAN: 8719273253564), please contact UNIQ Accessory using the following contact information:

Model: UNIQMini
EAN: 8719273253564
Tel: 0031 10 229 89 03
Email: info@uniqaccessory.com
Web: uniqaccessory.com
Address: Innsbruckweg 46, 3047AH Rotterdam, The Netherlands

----- WARRANTY FORM -----

Your full name:
Reason:
Product EAN:
Model:
Purchase Date:

MADE IN CHINA

