



UNIQPARTY WIRELESS SPEAKER USER GUIDE

To understand correct operating of the speaker, please read this manual carefully before using. Any content revise of the manual invalidates it. We are not responsible for consequence caused by faulty usage or oversight of this manual.

FEATURES


1. Classic design 2.1 CH Super Blaster Boombox of High Performance;
2. Perfect combination of charming party lights;
3. Made of durable fiber and a sturdy rubber case, it can easily cope with various adventures;
4. With cool appearance, stereo sound and deep bass ;
5. Secure simple pairing for user-friendly operating;
6. 10 meters operating range(without obstacles);
7. Wireless version 5.0, wireless stream music from any BT-enabled device such as your mobile phone, notebook, iPhone or iPad.
8. With TWS function,one Wireless connection to two same speakers at the same time,enjoy the stereo effect;
9. With USB and TF card, FM radio;
10. With Karaoke function,1 wired microphone input;
11. With Line-in function (AUX), suitable for PC, MID, TV and other audio

SPECIFICATION

Bluetooth version:	5.0 Supports A2DP and AVRCP profile
Tweeter Size:	2.5 * 2 inch
Subwoofer Size:	4 inch
Tweeter output:	6W * 2, 4 Ω
Subwoofer output:	60W, 4 Ω
Connections:	USB; Aux-in 3.5mm jack connection
Power supply:	Built-in rechargeable lithium battery 4400mAh
Recharge power:	DC 5V 1A
Product size:	170(W)*173(H)*409(L)MM

CONTROL PANEL

1. Forward(short press)/ volume down(Long press)
2. Backward(short press)/ volume up(Long press)
3. On/Off button(Long press)
4. TWS button
5. Play/Pause(Short press)
6. Mode (Switch Wireless, USB ,TF card, FM radio and AUX-IN)
7. Wired microphone input
8. Aux-in jack
9. Charging jack
10. USB port
11. TF card port

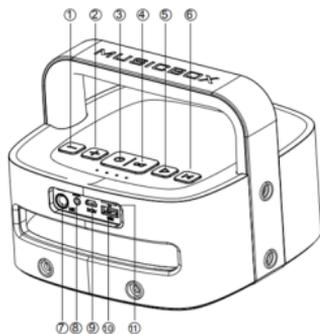

PLAYING MUSIC FROM USB DISK

1. Long press“Play/Pause” button.
2. Insert USB flash disk into slot, the music stored will be played automatically and the blue LED light on the “M” button always keep lighting.
3. Under playing mode, short press “Forward” or “Backward” button to select songs you like, long press to fast forward or backward the song.
4. Press “PLAY/PAUSE” to play or pause.
5. Please Long press“Play/Pause” button to turn off Speaker while without use.

BLUETOOTH FUNCTION

1. Long press“On/Off button” button, the LED light turn blue on the“On/Off button” button ,the “M” button turn blue and twinkle quickly and beep twice.
2. Activate Wireless of mobile phone and search for device name “UNI-QParty” then connect it. The blue LED light on the “M” button twinkle slowly and “di” third times once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Short Press “Forward” or “Backward” button on the devices or on Mobile phones to select songs you like.
5. Short Press “Play/Pause” button on the devices or on Mobile phones to play/ stop the music
6. Long press “Forward” or “Backward”button to adjust volume up and down. Or adjust the mobile phones’ volume.

FM RADIO

1. Long press "Play/Pause" button, press the "M" button to switch to FM radio state.
2. Under playing mode, short press "Play/Pause" button to auto search the FM Channel and store it automatically.
3. Short Press "Forward" or "Backward" button to change the stored FM channel.

AUX-IN

1. For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this devices. Then press the "M" button to switch to AUX-IN state.
2. When using an external device, all functions will be controlled by the external device except the "Play/Pause" button.

TWS FUNCTION

1. Turn on the two identical speakers you want to be paired, please noted they must be the same BT paring name, both under BT mode. Only need to set up one of the two units;
2. Long press "M" button for around 4 seconds once ,one time "di" voice comes out, then these two speakers go to connecting.
3. Then connect the BT paring name of the two machines which already BU paired, then music plays, one is in left channel while the rest one in right channel.

REMARKS

1. Press the "M" button to switch the different modes, the order is Wireless, USB , FM radio and AUX-IN.
2. Long press "Play/Pause" button to cut off the power supply while without use.

CHARGING

1. Power off the unit, put the provided charging cable into the charging slot, connect the other end to PC or other charger with 5V output (Not included). The red charging indicator lights up.
2. Charging time should be 3-5 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.



ACCESSORIES

Charging cable, Audio Cable, USER GUIDE

SAFETY INSTRUCTIONS:

1. To reduce the risk of fire or electric shock, do not expose this speaker to rain or moisture.
2. The speaker should be placed so that its ventilation openings are not blocked.
3. The speaker should be situated away from heat sources.
4. The speaker should be operated only with the type of power supply indicated in this manual.
5. For your own safety, please do not open this speaker for any reason.
6. Please do not use the product if any part of it is damaged.

For more information about UNIQParty(EAN: 8719273157138), please contact UNIQ Surround using the following contact information:

Model: UNIQParty
EAN: 8719273157138
Email: info@uniqaccessory.com
Web: uniqaccessory.com
Address: Innsbruckweg 46, 3047AH Rotterdam, The Netherlands

----- WARRANTY FORM -----

Your full name:
Reason:
Product EAN:
Model:
Purchase Date:

MADE IN CHINA

